

Unionville Appliance Ltd.

Sales and Service for Most Makes and Models

Service: 905-472-0021 Parts: 905-472-0021 / 1-800-303-9948

Maytag Washer Assembly

These diagrams are to assist you in identifying the part(s) you need. This is only an example as there are many different models. You may reference the numbers shown in these diagrams to assist Unionville Appliance in obtaining the correct part.

Upper Assembly

MAYTAG **MAYTAG WASHER**
TUB ASSEMBLY

maytag

- BLEACH TUBE INLET SPOUT TO OUTER TUB
A610-A710-A810
BLEACH TUBE INLET SPOUT TO OUTER TUB
A210-A310-A410
- HOSE CLAMP BLEACH TUBE TO TUB (205161)
- OUTER TUB A510-A610-A710-A810
OUTER TUB A110-A210-A310-A410
- BLEACH DEFLECTOR SPOUT ALL EXCEPT A110
- CLAMP (211641)
- BEARING SLEEVE FOR TUB BEARING (211130)
- SPRING CLAMP, CAP TO TUB (214739)
- CLAMP - CORBIN (211641)
- BOLT & GASKET ASSY. OUTER TUB BRACE
- INNER TUB-A110-A210-A310-A410
INNER TUB-A710-A810
INNER TUB-A510-A610
- MOUNTING STEM W/ SET SCREW (202521)
- STOP RING, AGITATOR SHAFT (015494)
- LOCK RING FOR RETAINER WASHER
- AIR DOME & TUBE
- RETAINER WASHER (015666)
- HOSE OUTER TUB TO PUMP
A110-A210-A310-A410
HOSE OUTER TUB TO PUMP
A510-A610-A710-A810
- CLAMP TO TUB COVER
- SEAL FOR TUB CLAMP
- TUB COVER
- INJECTOR HOSE
- HOSE CLAMP
- UNBALANCE BUMPER (211223)
- INJECTOR VALVE
- SLEEVE FOR INJECTOR
- INJECTOR TUBE
- WATER VALVE (205613)
- HOSE CLAMP (201575)
- AGITATOR DRIVE SHAFT SEAL
- CLAMPING NUT,
INNER TUB/MOUNTING STEM
- MOUNTING STEM KIT (INC. 15,28,29)
- TUB BEARING KIT
- AGITATOR, A110, A210, A310, A410
- FILTER FOR ADAPTER A210, A310, A410
- DISPENSER CUP
- FILTER FOR AGITATOR
A510, A610, A710, A810
- AGITATOR WITH STOP RING
A510, A610, A710, A810
- PUMP ASSY.

Maytag Washer Assembly

Lower Assembly

MAYTAG

maytag

MAYTAG WASHER

TUB ASSEMBLY

- 1 BLEACH TUBE INLET SPOUT TO OUTER TUB
A610-A710-A810
BLEACH TUBE INLET SPOUT TO OUTER TUB
A210-A310-A410
- 2 HOSE CLAMP BLEACH TUBE TO TUB (205161)
- 3 OUTER TUB A510-A610-A710-A810
OUTER TUB A110-A210-A310-A410
- 4 BLEACH DEFLECTOR SPOUT ALL EXCEPT A110
- 5 CLAMP (211641)
- 6 BEARING SLEEVE FOR TUB BEARING (211130)
- 7 SPRING CLAMP, CAP TO TUB (214739)
- 8 CLAMP - CORBIN (211641)
- 9 BOLT & GASKET ASSY. OUTER TUB BRACE
- 10 INNER TUB-A110-A210-A310-A410
INNER TUB-A710-A810
INNER TUB-A510-A610
- 11 MOUNTING STEM W/ SET SCREW (202521)
- 12 STOP RING, AGITATOR SHAFT (015494)
- 13 LOCK RING FOR RETAINER WASHER
- 14 AIR DOME & TUBE
- 15 RETAINER WASHER (015666)
- 16 HOSE OUTER TUB TO PUMP
A110-A210-A310-A410
HOSE OUTER TUB TO PUMP
A510-A610-A710-A810
- 17 CLAMP TO TUB COVER
- 18 SEAL FOR TUB CLAMP
- 19 TUB COVER
- 20 INJECTOR HOSE
- 21 HOSE CLAMP
- 22 UNBALANCE BUMPER (211223)
- 23 INJECTOR VALVE
- 24 SLEEVE FOR INJECTOR
- 25 INJECTOR TUBE
- 26 WATER VALVE (205613)
- 27 HOSE CLAMP (201575)
- 28 AGITATOR DRIVE SHAFT SEAL
- 29 CLAMPING NUT,
INNER TUB/MOUNTING STEM
- 30 MOUNTING STEM KIT (INC. 15,28,29)
- 31 TUB BEARING KIT
- 32 AGITATOR, A110, A210, A310, A410
- 33 FILTER FOR ADAPTER A210, A310, A410
- 34 DISPENSER CUP
- 35 FILTER FOR AGITATOR
A510, A610, A710, A810
- 36 AGITATOR WITH STOP RING
A510, A610, A710, A810
- 37 PUMP ASSY.